PHILIPS

フィリップス マルチグルーミング キット

品番 **QG3190**

取 扱 説 明 書

保証書付

保証書は、この取扱説明書の最終ページについておりますので記入を受けてください。

PHILIPS

フィリップス　マルチグルーミング キットをお買い上げいただき、まことにありがとうございます。長い間ご愛用いただくために、ご使用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。

また、お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。

商品のご確認

商品をご確認ください

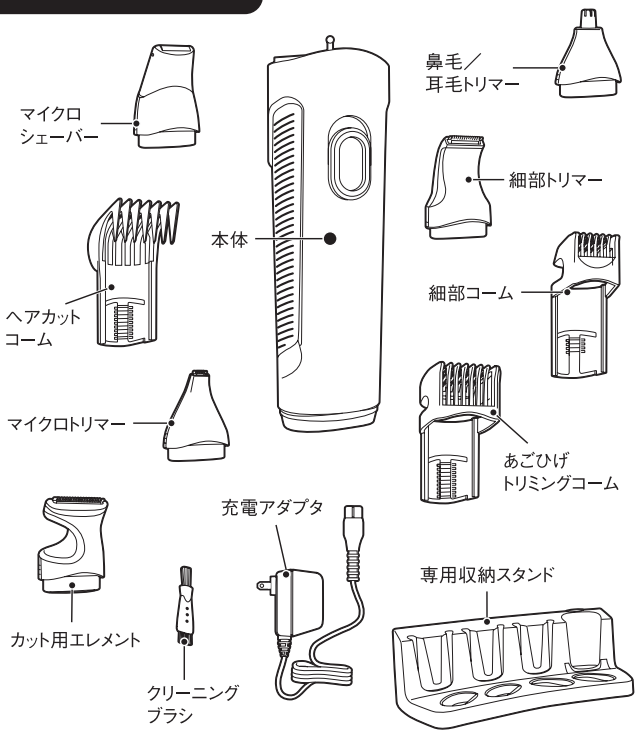

※改良の為、仕様を予告なく変更することがあります。

目　次

●はじめに
商品のご確認 …… 1
目次 …… 2
必ずお守りください …… 3・4
各部の名称 …… 5・6
用途別インデックス …… 7・8

●ご使用方法
充電の仕方／お手入れ方法 …… 9・10
基本的な使い方／アタッチメントの組合せ…11・12
ご使用方法 …… 13〜22

●英文解説
Guidance in English …… 23〜37

●電池について
ニッケル水素電池について …… 38

●困ったとき
故障かな?と思ったら …… 39

●保証
保証とアフターサービス …… 40
仕様／お客様情報センター …… 41
無料修理規定 …… 42
保証書 …… 最終ページ

必ずお守りください

安全上のご注意

●ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。

●誤った取扱いをしたときに想定される内容を「警告」と「注意」とに区分けしています。

○絵表示について

記号は、「危険、警告、注意」を示します。図の中や近くに具体的な注意内容を示します。

⚠ 警告	人が死亡または重傷を負う可能性が想定される内容。
⚠ 注意	人が傷害を負う可能性及び物的損害のみの発生が想定される内容。

○絵表示の例

・記号は、してはいけない「禁止」を示します。図の中や近くに具体的な禁止内容（左図の場合は分解禁止）を示します。

・記号は、必ずしていただく「強制」を示します。図の中や近くに具体的な強制内容（左図の場合は電源プラグをコンセントから抜くこと）を示します。

⚠ 警告

●本製品の電源を入れる前に、充電アダプタおよび本体に表示されている電圧が、ご使用になる地域の電圧に適しているか確認してください。

●本体ならびに充電アダプタは改造しない。また、修理技術者以外の人は、分解したり修理をしない。火災、感電、けがの原因となります。修理はお買い上げの販売店または小泉成器修理センターにご相談ください。

●お手入れの際は必ず電源プラグをコンセントから抜く。また、濡れた手で抜き差ししない。感電やけがをすることがあります。

●充電アダプタが傷んだり、コンセントの差込みが緩いときは使用しない。感電・ショート・発火の原因になります。

●充電アダプタを水につけたり、水をかけたりしない。ショート・感電の原因になります。

●充電アダプタを傷付けたり、電源コードを無理に曲げたり、引っ張ったり、ねじったり、たばねたり、重い物を載せたり、挟み込んだり、加工したりしない。電源コードが破損し、火災・感電の原因となります。

●乳幼児の手の届くところに本製品を置かないでください。

⚠ 注意

●電源プラグを抜くときは、充電アダプタの電源コード部を持たずに必ず先端の電源プラグ部を持って引き抜く。感電やショートして発火することがあります。

●充電時以外は、電源プラグをコンセントから抜く。ケガややけど、絶縁劣化による感電・漏電・火災の原因となります。

●刃は強く押さえない。破損して肌を傷つけることがあります。

●付属品やコームが破損または故障した場合は、本製品を使用しないでください。けがの原因になります。交換の際には必ずフィリップス社製の同型部品とお取り替えください。

●電源コネクタ受部にピンやごみを付着させない。感電・ショート・発火の原因になります。

使用上のご注意

1. 本製品は人の頭髪カット、あごヒゲ、口ヒゲ、もみあげ、鼻毛、耳毛、眉毛のお手入れやトリミングの用途に限られています。それ以外の目的で本製品を使用することはおやめください。
2. 本製品でまつげをお手入れすることは、絶対にしないでください。
3. 本製品の使用、充電、保管は室温15℃～35℃の環境下で行ってください。（尚、低温や高温で充電すると、充電池の寿命が短くなります。）
4. 室温、気圧、湿度が急激に変化する状況でご使用になる場合は、本製品をその環境下で30分ほど慣らしてからお使いください。
5. 付属品やコームの着脱、清掃は必ずスイッチを切ってから行ってください。
6. 切れ味が衰えてきたり、刃が破損した場合は、必ず新しいアタッチメントと交換してください。
7. 極端に高温または低温の場所、直射日光の当たる場所には保管しないでください。夏場、車の中に放置しないでください。
8. 本製品は、使用の都度、掃除をしてください。
9. 充電アダプタは付属の専用アダプタを使用してください。
10. 充電アダプタが破損、故障した場合は、事故を避けるために必ずフィリップス社製の同型充電アダプタをお求めください。
11. 専用収納スタンドは平らな所に設置してご使用ください。
12. マイクロシェーバーをご使用になる前に、損傷や消耗がないか必ず確認してください。

各部の名称

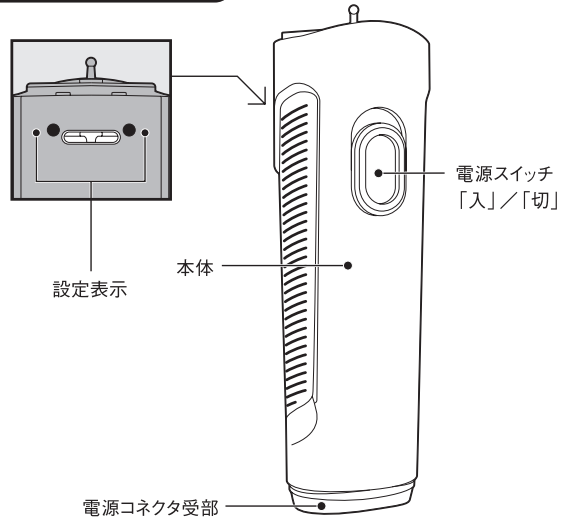
電源スイッチ
「入」／「切」
設定表示
本体
電源コネクタ受部

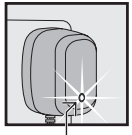
チャージライト

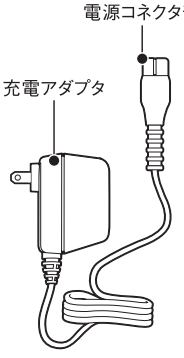
電源コネクタ部
充電アダプタ

クリーニングブラシ

各部の名称

シェービングフォイル部
マイクロシェーバー
▶ P.16

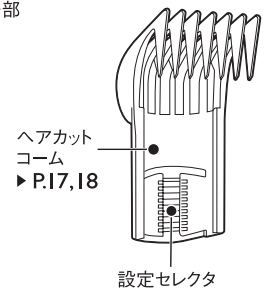
ヘアカット
コーム
▶ P.17,18
設定セレクタ

鼻毛／耳毛トリマー
▶ P.22

細部トリマー
▶ P.15,16,21

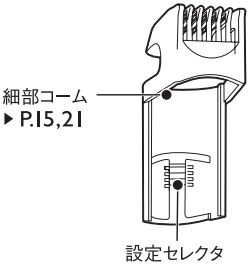
細部コーム
▶ P.15,21
設定セレクタ


マイクロトリマー
▶ P.20,21

カット用エレメント
▶ P.13~15,17~19

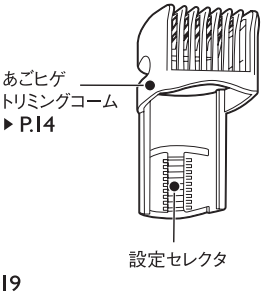
あごヒゲ
トリミングコーム
▶ P.14
設定セレクタ

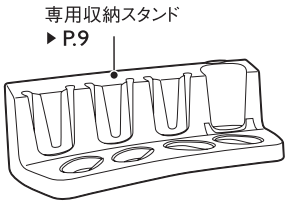
専用収納スタンド
▶ P.9

用途別インデックス

用途に合わせて、
各ページをご参照ください。

ヒゲのトリミング・シェービング ▶P.13

・あごヒゲの長さを整える
・無精ヒゲを作る

あごヒゲトリミングコーム
仕上がりの長さ2～18mm
▶P.14

・あごヒゲの輪郭を整える
・より細かくヒゲのお手入れをする
・短い無精ヒゲを作る

カット用エレメント
仕上がりの長さ0.6mm
▶P.15

・細かくトリミングをする
・デザイナースタイルの
あごヒゲを作る



細部コーム
仕上がりの長さ2～8mm
▶P.15

用途別インデックス

・口ヒゲやもみあげのお手入れをする
・輪郭をはっきりさせる
・より細かくヒゲのお手入れをする

細部トリマー
▶P.16

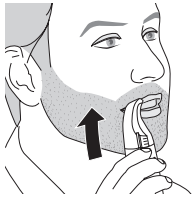

・ヒゲを剃る

マイクロシェーバー
▶P.16

ヘアカット ▶P.17

・ヘアスタイルに合わせて調整する…… ヘアカットコーム ▶P.17
・首筋や耳まわりを整える…… カット用エレメント ▶P.19
・細かくヘアスタイルをアレンジする…… マイクロトリマー ▶P.20

顔の毛のお手入れ（眉・鼻・耳） ▶P.21

・眉毛のお手入れ…… 細部コーム ▶P.21
・鼻毛／耳毛のお手入れ…… 鼻毛／耳毛トリマー ▶P.22

充電の仕方

初めてお使いになるときや、長い間ご使用にならなかったときは、充電しないと使用できません。ご使用前に充電してください。充電時間は約10時間です。本製品は充電が完了した状態で35分間のコードレス使用が可能です。

1 電源コネクタ部を本体の電源コネクタ受部に差し込み、充電アダプタをコンセントに取り付けます。

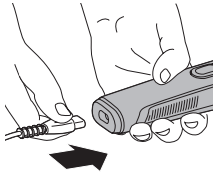

2 充電アダプタのチャージライトが点灯し、本製品が充電中であることを表示します。

充電中の表示

充電中は、充電アダプタのチャージライトが点灯します。

※本製品を主電源から直接使用することはできません。
※本製品は充電が完了しても、チャージライトは点灯のままです。

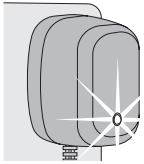

⚠注意　過充電を防ぐため24時間以上の長時間充電はしないでください。

充電池の寿命について

通常のご使用では、充電池の寿命は充放電300～500回が目安です。充電が完了したら、充電アダプタをコンセントから外してください。また、本製品を24時間以上コンセントに接続し続けないでください。いくら充電しても使用時間が極端に短いときは、本体が完全に止まるまで作動させてから、もう一度充電してください（年2回が目安）。それでも改善されないときは、充電池の寿命です。

お手入れ方法

本製品はいつも清潔な状態にしておいてください。洗浄に圧縮空気、研磨パッド、研磨洗浄剤、ベトロールやアセトンなどの刺激性の強い液体は絶対に使わないでください。

※本製品に潤滑剤を使う必要はありません。
※本製品はご使用のたびに掃除をしてください。

1 本製品の電源スイッチが「切」で、充電アダプタに接続されていないことを確認してください。

2 コームやその他の付属品を本製品から取り外します。

3 マイクロシェーバーを使った場合は、その上部を本体から取り外します。

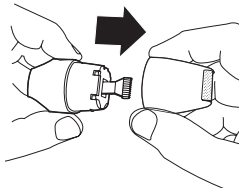

4 付属品やコームに付いた毛は、払い落としてください。

5 付属品、コーム、本体は、ぬるま湯で洗浄するかクリーニングブラシできれいに掃除してください。

6 充電アダプタは、クリーニングブラシや乾いた布で清潔にしておいてください。

⚠注意　充電アダプタは絶対に濡らさないでください。

※シェービングフォイルは非常に精巧な部品です。取り扱いには十分にご注意ください。シェービングフォイルが損傷した場合は、マイクロシェーバーの上部を取り替えてください。シェービングフォイルにはブラシを使わないでください。損傷の原因になります。

水洗いできます

本製品は国際的に認可されているIEC安全規則に準拠しており、浴槽やシャワーで安全にご使用いただくことができ、水道の蛇口で洗浄することができます。

基本的な使い方

すべての付属品（カット用エレメント、細部トリマー、マイクロトリマー、マイクロシェーバー、鼻毛／耳毛トリマー）の取り付け・取り外し方法は同じです。

1 取り付けの際には、付属品を本体に押し付けてください。

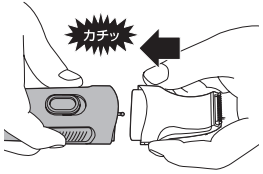

2 取り外しの際には、付属品を本体から引っ張ってください。

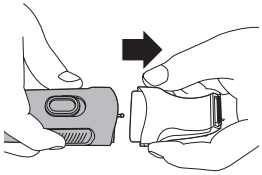

アタッチメントの組合せ

本製品はアタッチメントの組合せで、様々な用途にご使用いただけます。用途については、本ページまたはP.7「用途別インデックス」をご参照ください。

ヘアカット



カット用エレメント

首筋や耳まわりを整える。

▶ P.19

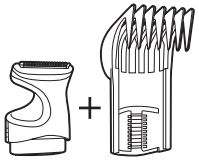

カット用エレメント
＋
ヘアカットコーム

ヘアスタイルに合わせて調整する。

▶ P.17

マイクロトリマー

より細かくヘアスタイルをアレンジする。

▶ P.20

ヒゲのトリミング・シェービング



カット用エレメント

あごヒゲの輪郭を整えたり、短い無精ヒゲを作る。

▶ P.15

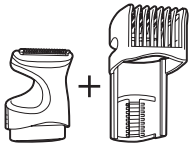

カット用エレメント
＋
あごヒゲトリミングコーム

あごヒゲの長さを整えたり、無精ヒゲを作る。

▶ P.14

細部トリマー

口ヒゲやもみあげのお手入れをしたり、輪郭を整える。

▶ P.16

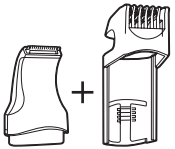

細部トリマー
＋
細部コーム

より細かくトリミングをする。

▶ P.15

マイクロシェーバー

ヒゲを剃る。

▶ P.16

顔の毛のお手入れ（眉・鼻・耳）

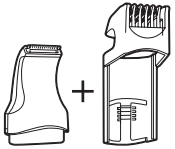

細部トリマー
＋
細部コーム

眉毛全体の長さを整える。

▶ P.21



マイクロトリマー

眉毛の輪郭を整えたり、ムダ毛を除去する。

▶ P.21

鼻毛／耳毛トリマー

鼻毛や耳毛をお手入れする。

▶ P.22

ヒゲのトリミングの準備

トリミングを行う前に、本製品の充電が完了されていることを確認します。充電中は本製品を作動させることはできません。（交流不可）

1 目の細かいくしでトリミングをする部分（あごヒゲ、口ヒゲ、もみあげ、眉毛）をとかします。

2 カット用エレメントを本体に取り付けます。（P.11「基本的な使い方」をご参照ください。）

アタッチメントの使い分け

ヒゲトリミング用のアタッチメントは、トリミングする面積とヒゲの長さによって使い分けます。以下の表をご参照ください。

あごヒゲトリミングコームの使い方

1 あごヒゲトリミングコームを本体の両側にあるガイド溝にはめます。（カチッと音がします。）

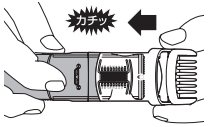

2 設定セレクタを上下に動かし、お好みの設定を選びます。本製品の裏側にある設定表示に、選んだ設定が表示されます。

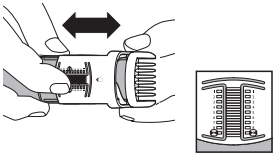

以下の表は、仕上がりの長さを設定別に表しました。
本製品を初めてお使いいただく際には、最長（9）の設定から始められる事をお勧めします。

あごヒゲトリミングコームの仕上がりの長さ

設定	1	2	3	4	5	6	7	8	9
長さ	2mm	4mm	6mm	8mm	10mm	12mm	14mm	16mm	18mm

3 電源スイッチを「入」にし、本製品をあごヒゲに沿って、ゆっくり動かします。

4 コームについてしまった毛はこまめに取り除いてください。コームに多くの毛がついてしまった場合は、コームを本体から取り外し払い落としてください。

無精ヒゲを作るには

「無精ヒゲ」を作るには、あごヒゲトリミングコームの設定を「1」にしてください。

- あごヒゲの生えている逆方向に本製品を動かすと、より効果的にカットできます。
- あごヒゲの生えている方向は部分によって異なるため、本製品をいろいろな方向（上下、左右）へ動かしてください。
- 各部分を均等にカットするために、常にコームの平らな部分が皮膚にぴったり接触するようにしてください。

カット用エレメントの使い方（ヒゲトリミング）

あごヒゲの輪郭を整えたりより細かくお手入れするには、あごヒゲトリミングコームを取り外してトリミングします。コームを使わずにカットすると、非常に短い（0.6mm）無精ヒゲが出来上がります。

1 設定セレクタを上方向に押し上げ、あごヒゲトリミングコームを引っ張り本体から取り外してください。

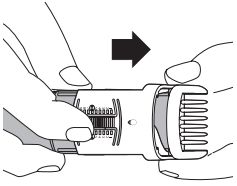

2 カット用エレメントの取り扱いには十分にご注意いただき、慎重に行ってください。取り扱いの際にはヒゲに軽く触れるようにしてください。

細部コームの使い方

細かい部分のトリミングやデザイナースタイルのあごヒゲを作るには細部トリミーに細部コームを取り付けてトリミングします。

1 細部トリマーを本体に取り付けます。（P.11「基本的な使い方」をご参照ください。）

2 細部コームを本体の両側にあるガイド溝にはめます。（カチッと音がします。）

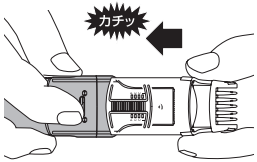

3 設定セレクタを上下に動かし、お好みの設定を選びます。

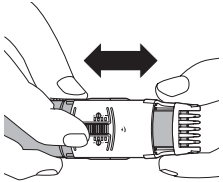

本製品の裏側にある設定表示に、選んだ設定が表示されます。本製品を初めてお使いいただく際には、最長（4）の設定から始められることをお勧めします。

細部コームの仕上がりの長さ				
設定	1	2	3	4
長さ	2mm	4mm	6mm	8mm

細部トリマーの使い方

口ヒゲやもみあげのお手入れや、輪郭をはっきりさせたりより細かくお手入れするには、細部トリマーから細部コームを取り外してトリミングします。

1 設定セレクタを上方向に押し上げ、細部コームを引っ張り本体から取り外してください。

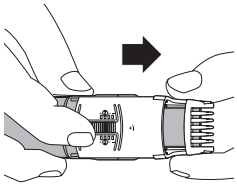

2 本製品を縦方向にして、トリミングしたい部分にあてます。

マイクロシェーバーの使い方

マイクロシェーバーを使ってヒゲを剃ると、形の良い輪郭がスムーズに出来上がります。

> ⚠注意 マイクロシェーバーをご使用になる前に、損傷や消耗がないか必ず確認してください。けがの原因になりますので、フォイル部分やカッターに損傷や消耗がある場合は、マイクロシェーバーを使わないでください。フォイル部分に損傷が見られる場合は、マイクロシェーバーの上部を取り替えてください。カッターが損傷している場合は、新しいマイクロシェーバーにお取り替えいただき安全にご使用ください。

1 コームを取り外したカット用エレメントまたは細部トリマーで、剃りたい部分の輪郭をあらかじめトリミングしておきます。

2 マイクロトリマーを本体に取り付けます。（P.11「基本的な使い方」をご参照ください。）

3 マイクロシェーバーを軽く皮膚にあて輪郭に沿ってシェービングし、無精ヒゲを除去します。マイクロシェーバーは皮膚に強く押し当てすぎないでください。

ヘアカットの準備

充電中は本製品を作動させることはできません。（交流不可）
※本製品は、必ず乾いた清潔な髪にお使いください。洗いたての濡れた髪には使用しないでください。

1 カットされる方の頭部がカットを行う方の胸の高さになるようにしてください。頭の各部分がはっきり確認でき作業がしやすくなります。

2 髪の生えている方向に沿ってくしを入れます。

3 カット用エレメントを本体に取り付けます。（P.11「基本的な使い方」をご参照ください。）

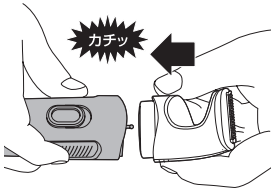

ヘアカットコームの使い方

1 ヘアカットコームを本体の両側にあるガイド溝にはめます。（カチッと音がします。）

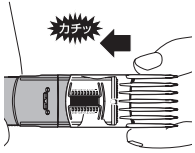

2 設定セレクタを上下に動かし、お好みの設定を選びます。

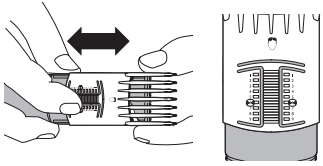

本製品の裏側にある設定表示に、選んだ設定が表示されます。

以下の表は、仕上がりの長さを設定別に表しました。
本製品を初めてお使いいただく際には、最長（9）の設定から始められることをお勧めします。

ヘアカットコームの仕上がりの長さ									
設定	1	2	3	4	5	6	7	8	9
長さ	4mm	6mm	8mm	10mm	12mm	14mm	16mm	18mm	20mm

お気に入りのヘアスタイルに使用した設定をメモしておけば、次回のカットの参考になり便利です。

3 本製品の電源スイッチを「入」にします。

4 本製品を髪に沿って、ゆっくり動かします。
- 髪の生えている方向は場所によって異なるため、いろいろな方向（上下、左右）へ本製品を動かしてください。
- 切り残しなくきれいに髪をカットするためには、同じ場所に数回コームをあて整えてください。

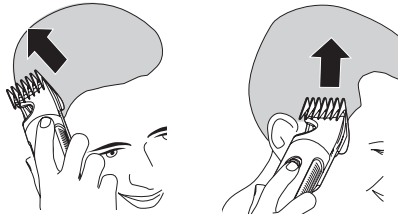

髪の生えている逆方向に本製品を動かすと、より効果的にカットできます。

5 コームについてしまった毛はこまめに取り除いてください。コームに多くの毛がついてしまった場合は、コームを本体から取り外し払い落としてください。

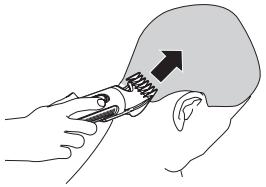

各部分を均等にカットするために、常にコームの平らな部分が頭皮にぴったり接触するようにしてください。

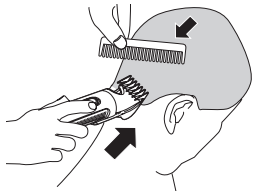

くしで髪をコームに向かってなでながらカットすれば、巻き毛、くせ毛、薄毛、長髪なども上手にカットできます。

カット用エレメントの使い方（ヘアカット）

ヘアカットコームを取り外せば、非常に短く（頭皮から0.6mm）カットをすることができます。首筋や耳まわりを整える際にお使いいただけます。

※コームを取り外して使用される場合は、カット用エレメントに触れた髪はすべてカットされてしまいますのでご注意ください。

1 設定セレクタを上方向に押し上げ、コームを引っ張り本体から取り外してください。

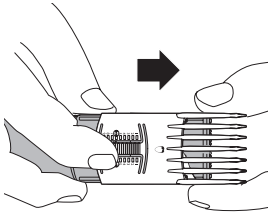

2 耳まわりのヘアラインの形を作るには、最初に耳にかかっている毛先をくしで整えてください。

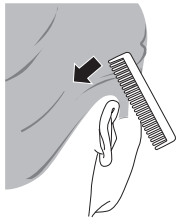

3 耳まわりの輪郭を形作る際には、カット用エレメントの片側だけが毛先に触れるよう本製品を傾けてください。
毛先だけをカットしてください。耳の近くにヘアラインが来るようにします。

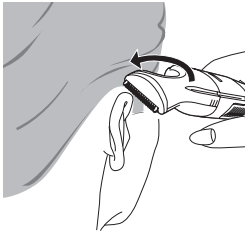

4 首筋やもみあげのラインを整えるには、本製品の向きを変えて下方向へなでていきます。
自然なヘアラインに沿って、本製品をゆっくり滑らかに動かしてください。

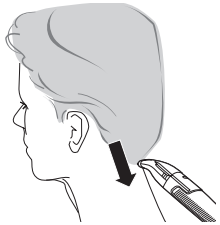

マイクロトリマーの使い方

マイクロトリマーでいろいろなヘアスタイルのアレンジができます。マイクロトリマーを使えば非常に短く（0.6mm）カットをすることができます。

※マイクロトリマーに触れた髪はすべてカットされてしまいますのでご注意ください。

1 マイクロトリマーを本体に取り付けます。（P.11「基本的な使い方」をご参照ください。）

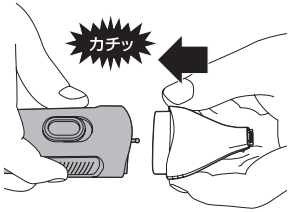

2 マイクロトリマーの取り扱いには十分にご注意いただき、慎重に行ってください。

上手にカットするには

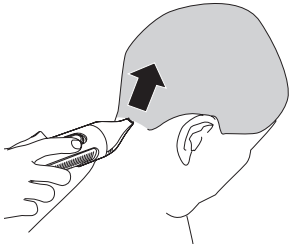

髪の生えている逆方向にトリマーを動かすと、良い仕上がりが得られます。

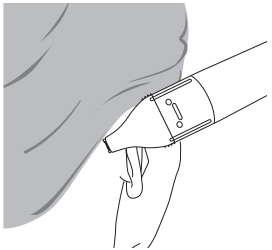

マイクロトリマーが常に頭皮にぴったり接触するようにしてください。

眉毛のお手入れ

⚠警告 まつげのトリミングは絶対にしないでください。また本製品を目に近づけすぎないようご注意ください。

眉毛のトリミング

細部トリマーに細部コームを取り付け、眉毛全体の長さを整えます。

1 眉毛の生えている方向にくしをあてます。

2 細部トリマーを本体に取り付けます。(P.11「基本的な使い方」をご参照ください。)

3 細部コームを本体の両側にあるガイド溝にはめます。(カチッと音がします。)

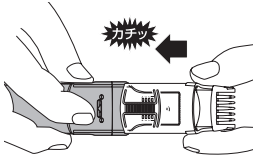

4 設定セレクタを上下に動かし、お好みの設定を選びます。本製品の裏側にある設定表示に、選んだ設定が表示されます。



本製品の裏側にある設定表示に、選んだ設定が表示されます。本製品を初めてお使いいただく際には、最長(4)の設定から始められる事をお勧めします。

細部コームの仕上がりの長さ				
設定	1	2	3	4
長さ	2mm	4mm	6mm	8mm

5 細部トリマーを眉毛にあて、眉尻から眉頭の方向へゆっくりと動かします。

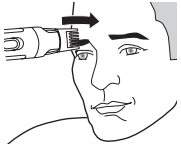

眉毛の輪郭を整え、顔のムダ毛を一本ずつ除去

マイクロトリマーを使って眉毛のラインや輪郭を整えます。また顔のムダ毛を一本ずつ除去します。

1 マイクロトリマーを本体に取り付けます。(P.11「基本的な使い方」をご参照ください。)

2 眉毛のラインを整える際には、まぶたの皮膚を引っ張りあげてください。

3 マイクロトリマーの取り扱いには十分にご注意いただき、慎重に行ってください。
- マイクロトリマーは必ず眉毛の生えている逆方向に動かしてください。
- マイクロトリマーが常に皮膚にぴったり接触するようにしてください。

鼻毛／耳毛のお手入れ

鼻毛のお手入れ

1 鼻毛／耳毛トリマーを本体に取り付けます。(P.11「基本的な使い方」をご参照ください。)

2 鼻孔内を必ず清潔にしておいてください。

3 本製品の電源スイッチを「入」にして、トリマーの先端を鼻孔内へ挿入します。

4 トリマーの先端を回転させながら鼻孔内へゆっくりと出し入れしながら、ムダ毛を除去します。先端部分の片側を鼻孔内の皮膚にしっかりと押し当てると、くすぐったい不快感がなくなります。

⚠注意 トリマーの先端は5mm以上鼻孔内へ挿入しないでください。

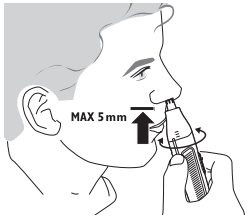

耳毛のお手入れ

1 鼻毛／耳毛トリマーを本体に取り付けます。(P.11「基本的な使い方」をご参照ください。)

2 耳を必ず清潔にしておいてください。耳垢なども取り除いてください。

3 本製品の電源スイッチを「入」にして、トリマーの先端を耳に沿って、ゆっくりと動かし、耳からはみ出しているムダ毛を除去します。

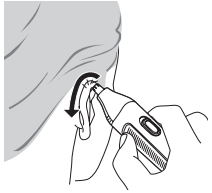

4 トリマーの先端を注意深く耳に挿入します。

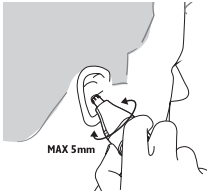

⚠注意 鼓膜を損傷する恐れがありますので、トリマーの先端は5mm以上耳へ挿入しないでください。

General description

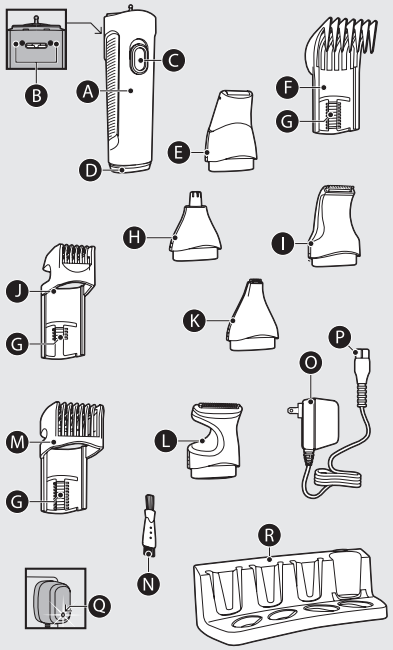

A Handle
B Setting indicator
C On/off switch
D Socket for appliance plug
E Micro shaver
F Hair clipping comb
G Setting selector
H Nose/ear hair trimmer
I Precision timmer
J Precision comb
K Micro trimmer
L Cutting element
M Beard trimming comb
N Cleaning brush
O Adapter
P Appliance plug
Q Charging light
R Storage stand

Important

Read this user manual carefully before you use the appliance and save it for future reference.

Danger

- Make sure the adapter does not get wet.

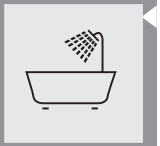

Warning

- Check if the voltage indicated on the adapter and on the appliance corresponds to the local mains voltage before you connect the appliance.
- The adapter contains a transformer. Do not cut off the adapter to replace it with another plug, as this causes a hazardous situation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Caution

- Use, charge and store the appliance at a temperature between 15°C and 35°C.
- Only use the adapter supplied to charge the appliance.
- If the adapter is damaged, always have it replaced with one of the original type in order to avoid a hazard.
- Do not use the appliance when one of the attachments or combs is damaged or broken as this may cause injury.
- Be careful with hot water. Always check if the water is not too hot, to prevent your hands from getting burnt.
- This appliance is only intended for clipping human scalp hair and for trimming and grooming the human beard, moustache, sideburns, nose hair, ear hair and eyebrows. Do not use it for another purpose.
- Never try to trim your eyelashes.
- If the appliance is subjected to a major change in temperature, pressure or humidity, let the appliance acclimatise for 30 minutes before you use it.

Compliance with standards

- The appliance complies with the internationally approved IEC safety regulations and can be safely used in the bath or shower and cleaned under the tap.
- This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Preparing for use

Charging

Charge the appliance for at least 10 hours before you use it for the first time and after a long period of disuse.
When the appliance is fully charged, it has a cordless operating time of up to 35 minutes. Do not charge the appliance for more than 24 hours.

The appliance does not run from the mains.

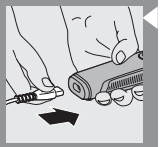

1 Insert the appliance plug into the socket of the appliance and put the adapter in the wall socket.

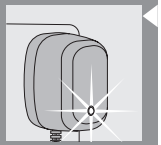

◗ The charging light on the adapter goes on to indicate that the appliance is charging.

Note: The charging light does not change colour and does not go out when the appliance is fully charged.

Optimising the lifetime of the rechargeable battery

- Remove the adapter from the wall socket when the battery is fully charged (which takes 10 hours).
- Do not leave the appliance plugged into the wall socket for more than 24 hours.
- Discharge the battery completely twice a year by letting the motor run until it stops. Then fully recharge the battery.

Attaching/detaching attachments

All attachments (cutting element, precision trimmer, micro trimmer, micro shaver and nose/ear hair trimmer) can be attached and detached in the same way.

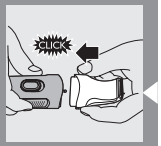

1 To attach the attachment, push it onto the handle.

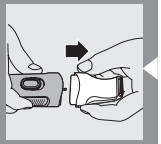

2 To detach the attachment, pull it off the handle.

Hair clipping

Preparing for hair clipping

Make sure that the appliance is fully charged when you start clipping. It is not possible to run the appliance from the mains.

Only use the appliance on clean, dry hair. Do not use it on freshly washed hair.

1 Make sure that the head of the person whose hair you intend to cut is at the same level as your chest. This ensures that all parts of the head are clearly visible and within easy reach.

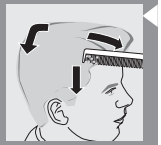

2 Comb the hair in the direction of growth.

3 Put the cutting element on the handle (see section 'Attaching/detaching/attachments' in chapter 'Preparing for use').

Clipping with hair clipping comb

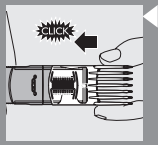

1 Slide the hair clipping comb into the guiding grooves on both sides of the handle ('click').

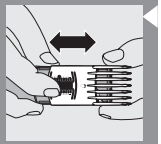

2 Press the setting selector upwards or downwards to set the desired setting.

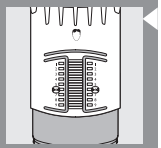

◗ The setting indicator on the back of the appliance shows the selected setting.

The table shows how long the hair will be after clipping at the different settings.
When you clip for the first time, start at the highest setting (9) to familiarise yourself with the appliance.

Settings of hair clipping comb

Setting	Hair length after clipping
1	4mm
2	6mm
3	8mm
4	10mm
5	12mm
6	14mm
7	16mm
8	18mm
9	20mm

Tip: Write down the hair length settings you have used to create a certain hairstyle as a reminder for future clipping sessions.

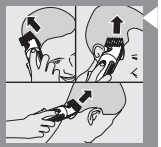

3 Switch on the appliance.

4 Move the appliance through the hair slowly.
- To clip in the most effective way, move the appliance against the direction of hair growth.
- Since all hair does not grow in the same direction, you need to move the appliance in different directions (upward, downward or across).
- Make sure that the flat part of the comb is always fully in contact with the scalp to obtain an even result.
- Make overlapping passes over the head to ensure that you cut all the hair that needs to be cut.
- To achieve a good result with curly, sparse or long hair, use a comb to guide the hair towards the appliance.

5 Regularly remove cut hair from the comb.
If a lot of hair has accumulated in the comb, remove the comb from the appliance and blow and/or shake the hair out of it.

Contouring without hair clipping comb

You can use the appliance without hair clipping comb to clip hair very close to the skin (0.6mm) or to contour the neckline and the area round the ears.

Be careful when you clip without comb because the cutting element removes every hair it touches.

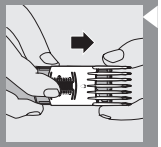

1 Press the setting selector upwards and pull the comb off the handle.

2 Before you start to contour the hairline round the ears, comb the hair ends over the ears.

3 Tilt the appliance in such a way that only one edge of the cutting element touches the hair ends when you shape the contours round the ears.

Only cut the hair ends. The hairline should be close to the ear.

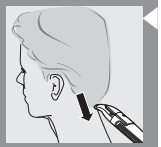

4 To contour the neckline and sideburns, turn the appliance and make downward strokes.

Move the appliance slowly and smoothly. Follow the natural hairline.

Cutting shapes with micro trimmer

You can use the micro trimmer to cut shapes in scalp hair. It cuts hair very close to the skin (0.6mm).

Be careful when you use the micro timmer because it removes every hair it touches.

1 Put the micro trimmer on the handle (see section 'Attaching/detaching attachments' in chapter 'Preparing for use').

2 Make careful and controlled movements with the micro trimmer.
- To achieve a good cutting result, move the trimmer against the direction of hair growth.
- Always make sure the micro trimmer is fully in contact with the skin.

Trimming

Preparing for trimming

Make sure that the appliance is fully charged before you start trimming. It is not possible to run the appliance from the mains.

1 Comb the hair to be trimmed (beard, moustache, sideburns, eyebrows) with a fine comb.

2 Put the cutting element on the handle (see section 'Attaching/detaching attachments' in chapter 'Preparing for use').

Beard trimming with beard trimming comb

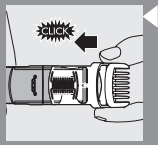

1 Slide the beard trimming comb into the guiding grooves on both sides of the handle ('click').

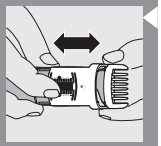

2 Press the setting selector upwards or downwards to set the desired setting.

- The setting indicator on the back of the appliance shows the selected setting.

The table shows how long the hair will be after trimming at the different settings.
When you trim for the first time, start at the highest setting (9) to familiarise yourself with the appliance.

Settings of beard trimming comb

Setting	Hair length after trimming
1	2mm
2	4mm
3	6mm
4	8mm
5	10mm
6	12mm
7	14mm
8	16mm
9	18mm

3 Switch on the appliance.

4 Move the appliance through the hair slowly.
- To trim in the most effective way, move the appliance against the direction of hair growth.
- Since all hair does not grow in the same direction, you need to move the appliance in different directions (upward or across).
- Make sure that the flat part of the comb is always fully in contact with the skin to obtain an even result.

5 Regularly remove cut hair from the comb.
If a lot of hair has accumulated in the comb, remove the comb from the appliance and blow and/or shake the hair out of it.

Trimming at the 'stubble look' setting

1 To create a 'stubble look' , trim with the beard trimming comb set to hair length setting 1.

Beard trimming without beard trimming comb

Use the beard trimmer without the beard trimming comb to contour your beard and to remove single hairs.
Cutting without comb results in a very short stubble beard (0.6mm).

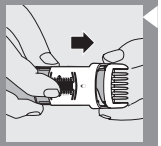

1 Press the setting selector upwards and pull the beard trimming comb off the handle.

2 Make careful and controlled movements with the beard trimmer. Touch the hair lightly with the cutting element.

Beard trimming with precision trimmer and precision comb

Use the precision trimmer with the precision comb to trim smaller areas and to create designer beards.

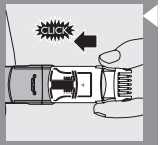

1 Put the precision trimmer on the handle (see section 'Attaching/detaching attachments' in chapter 'Preparing for use').

2 Slide the precision comb into the guiding grooves on both sides of the handle ('click').

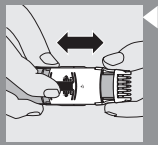

3 Press the setting selector upwards or downwards to set the desired setting.

- The setting indicator on the back of the appliance shows the selected setting.

The table shows how long the hair will be after trimming at the different settings.
When you trim for the first time, start at the highest setting (4) to familiarise yourself with the appliance.

Settings of precision comb

Setting	Hair length after trimming
1	2mm
2	4mm
3	6mm
4	8mm

Beard trimming with precision trimmer but without precision comb

Use the precision trimmer without the precision comb to shape your moustache and sideburns, to define contours and to remove single hairs.

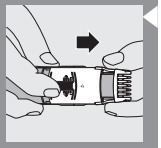

1 Press the setting selector upwards and pull the precision comb off the handle.

2 Hold the appliance upright and trim the desired areas.

Grooming facial hair (nose hair, ear hair and eyebrows)

Trimming nose hair

1 Put the nose/ear hair trimmer on the handle (see section 'Attaching/detaching attachments' in chapter 'Preparing for use').

2 Make sure your nostrils are clean.

3 Switch on the appliance and insert the tip of the trimmer into one of your nostrils.

Do not insert the tip more than 0.5cm into your nostril.

4 Slowly move the tip in and out while turning it round at the same time to remove unwanted hair.

To reduce the tickling effect, make sure that you press the side of the tip firmly pressed against the skin.

Trimming ear hair

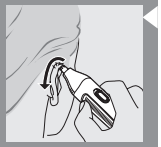

1 Put the nose/ear hair trimmer on the handle (see section 'Attaching/detaching attachments' in chapter 'Preparing for use').

2 Clean the outer ear channel. Make sure it is free from wax.

3 Switch on the appliance and move the tip softly round the ear to remove hairs that stick out beyond the rim of the ear.

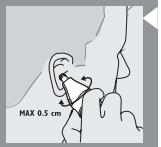

4 Carefully insert the tip into the outer ear channel.

Do not insert the tip more than 0.5cm into the ear channel as this could damage the eardrum.

Trimming eyebrows with precision trimmer and precision comb

Use the precision trimmer with the precision comb to trim entire eyebrows to a uniform length.

Never trim your eyelashes. Never come too close to your eyes.

1 Comb the eyebrows in the direction of hair growth.

2 Put the precision trimmer on the handle (see section 'Attaching/detaching attachments' in chapter 'Preparing for use').

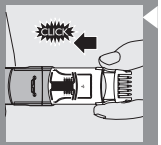

3 Slide the precision comb into the guiding grooves on both sides of the handle ('click').

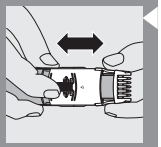

4 Press the setting selector upwards or downwards to set the desired setting.

- The setting indicator on the back of the appliance shows the selected setting.

The table shows how long the hair will be after trimming at the different settings.
When you trim for the first time, start at the highest setting (4) to familiarise yourself with the appliance.

Settings of precision comb

Setting	Hair length after trimming
1	2mm
2	4mm
3	6mm
4	8mm

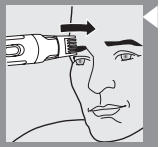

5 Move precision trimmer over the eyebrow from the outer tip of the eyebrow towards the base of the nose.

Contouring eyebrows/removing single facial hairs with micro trimmer

Use the micro trimmer to shape and define eyebrows and to remove single facial hairs.

Never trim your eyelashes. Never come too close to your eyes.

Do not use micro trimmer too close to a mirror.

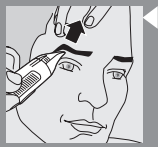

1 Put the micro trimmer on the handle (see section 'Attaching/detaching attachments' in chapter 'Preparing for use').

2 When you contour eyebrows, stretch the skin of the eyelid.

3 Make careful and controlled movements with the micro trimmer.
- Always move the micro trimmer against the direction of hair growth.
- Always make sure the micro trimmer is fully in contact with the skin.

Shaving

Shaving with the micro shaver

Use the micro shaver to create smooth, well-defined contours.

Before you use the micro shaver, always check it for damage or wear. If the foil or cutter is damaged or worn, do not use the micro shaver, as injury may occur. If the foil is damaged, replace the top part of the micro shaver and if the cutter is damaged, replace the whole attachment before you use the micro shaver again.

1 Pre-trim the contours you want to shave with the cutting element without comb or the precision trimmer without comb.

2 Put the micro shaver on the handle (see section 'Attaching/detaching attachments' in chapter 'Preparing for use').

3 Gently press the micro shaver onto the skin and shave along contoured edges to remove any stubble.

Do not press too hard.

Cleaning

Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Note: The appliance does not need any lubrication.
Clean the appliance every time you have used it.

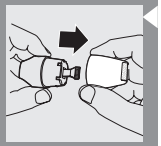

1 Make sure the appliance is switched off and disconnected from the socket.

2 Remove any comb and/or attachment from the appliance.

3 If you have used the micro shaver, separate its top part from its body.

The shaving foil is very delicate. Handle it carefully. Replace the top part of the micro shaver if the shaving foil is damaged.
Do not clean the shaving foil with the brush, as this may cause damage.

4 Blow and/or shake out any hair that has accumulated in the attachments and/or combs.

5 Clean the attachments, the combs and the appliance with lukewarm water or with the cleaning brush.

6 Clean the adapter with the cleaning brush or a dry cloth.

Keep the adapter dry.

Replacement

If the adapter is damaged, always have it replaced with one of the original type in order to avoid a hazard.
Only replace damaged or worn attachments or combs with original Philips replacement attachments or combs.
Philips replacement attachments, combs and adapters are available from your Philips dealer and authorised Philips service centres.
If you have any difficulties obtaining an adapter or replacement attachments and combs for the appliance, contact the Philips Customer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet).

Environment

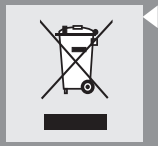

- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

The built-in rechargeable battery contains substances that may pollute the environment. Always remove the battery before you discard and hand in the appliance at an official collection point. Dispose of the battery at an official collection point for batteries. If you have trouble removing the battery, you can also take the appliance to a Philips service centre. The staff of this centre will remove the battery for you and will dispose of it in an environmentally safe way.

Disposal of the battery

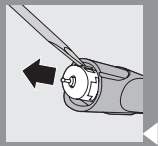

Only remove the battery when it is completely empty.

1. Disconnect the appliance from the mains and let the appliance run until the motor stops.
2. Remove any comb and/or attachment from the appliance.
3. Remove the top part of the appliance with a screwdriver.

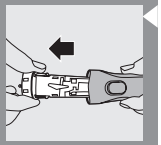

4. Pull the inner part out of the appliance.

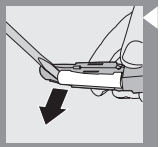

5. Pry open the inner part and pull out the battery.
6. Cut the wires close to the battery with a pair of household scissors.

Do not connect the appliance to the mains again after you have removed the battery.

Guarantee & service

If you need information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Customer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Customer Care Centre in your country, go to your local Philips dealer or contact the Service Department of Philips Domestic Appliances and Personal Care BV.

ニッケル水素電池のリサイクルについて

この製品はニッケル水素電池を使用しています。ニッケル水素電池はリサイクル可能な貴重な資源です。ご使用済みの製品の廃棄に際しては、ニッケル水素電池を取り出し、リサイクルにご協力ください。

※ご不明な場合は、お客様情報センターまでお問い合わせください。

ニッケル水素電池について

Ni-MH

⚠注意　製品を廃棄するとき以外は、絶対に本体を分解しないでください。

1 コームや付属品を本体から取り外します。

2 ドライバーで本体の上部を取り外します。

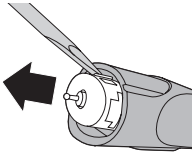

3 本体の内部を引っ張り出します。

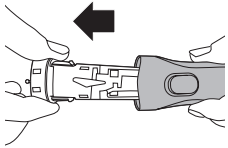

4 取り出した内部分をあけてバッテリーを取り出します。

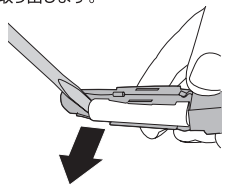

5 はさみで、バッテリーのなるべく近い位置で電線を切ります。

6 最寄りの電器店または自治体の設定するリサイクルBOXへ入れてください。

※バッテリーを取り出した後は、本製品を主電源に接続しないでください。

＊上記1～5は製品廃棄の際の充電池の取り外し方の説明です。製品使用中の充電池交換は、お買い求めの販売店に依頼してください。専用部品が必要となりますので、お客様による充電池の交換は絶対になさらないでください。

故障かな？と思ったら

故障かな？と思ったら、
お調べください。

だんだん切れ味が悪くなった	●アタッチメントの刃の部分が汚れていませんか? ●アタッチメントの刃の部分が損傷または摩耗していませんか?
充電しても使用時間が極端に短い	●本体が完全に止まるまで作動させてからもう一度充電してください。 ●それでも改善されないときは、充電池の寿命です。 P10「充電池の寿命について」の項をお読みください。
本体のスイッチを押しても作動しない	●充電はしましたか? 1時間以上の充電をしてください。
充電できない	●充電アダプタの電源プラグ部はコンセントにきちんと差し込まれていますか? 本体の電源コネクタ受部に充電アダプタのコードがきちんと差し込まれていますか?確認してください。 ●充電アダプタの電源コードが断線していませんか? 新しい充電アダプタ（品番:HP6350）をお買い求めください。

以上の点検により、正常な状態に戻らない場合は、
お買い求めの販売店か小泉成器修理センターにお問い合わせ願います。

保証とアフターサービス

保証書と修理サービスについて（必ずお読みください）

〈保証書・最終ページに付属〉

●保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店から受け取っていただき内容をよくお読みのあと大切に保管してください。

保証期間…お買上げ日から2年間（アタッチメントを除く）

【補修用性能部品の最低保有期間】

●補修用性能部品の最低保有期間は製造打ち切り後6年です。
●性能部品とは、その製品の機能を維持するために必要な部品です。

【ご不明な点や修理に関するご相談は】

●修理に関するご相談ならびにご不明な点は、お買い上げの販売店または、小泉成器修理センターにお問い合わせください。

【修理を依頼されるときは】

●修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検ください。尚、異常のあるときはご使用を中止し、お買い上げの販売店へご依頼ください。

【保証期間中は】

●製品に保証書を添えてお買い上げの販売店にご持参ください。保証書の記載内容により無料修理いたします。

【保証期間が過ぎているときは】

●修理によって商品の機能が維持できる場合は、ご希望により有料で修理させていただきます。

【海外での本製品の保証及びアフターサービスについて】

●本製品の保証は海外においても有効です。
●日本国以外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要することもあります。
●海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お困りの点がございましたら下記までご連絡ください。

Philips Consumer Lifestyle
Service Department
P.O.Box 20100
9200 CA DRACHTEN
The Netherlands
Fax:+31 51 259 2785

便利メモ			
お買い上げ日	年　月　日	お買い上げ店名	TEL.（　　）

ご使用の時このような症状はありませんか？

- ●本体にさわると時々電気を感じる。
- ●こげくさい臭いがする。
- ●電源コード部を動かすと通電したり、しなかったりする。
- ●その他の異常、故障がある。

このような症状の時は、故障や事故防止のため、スイッチを切り、充電アダプタをコンセントからはずして、必ず販売店にご相談ください。

仕　様

品番	QG3190
電源方式	充電式（専用充電アダプタ使用）
消費電力	約2W
定格電圧	AC100V（50/60Hz）
本体質量	384g（付属品すべて含む）
充電時間	10時間

- ●フィリップス製品の修理受付はお買い上げの販売店にお申し出ください。
- ●修理サービス等についておわかりにならないことは、下記にお問い合わせください。

コンシューマーライフスタイル事業部
日本販売総代理店
小泉成器株式会社
〒541-0051　大阪市中央区備後町3-3-7

製品に関するお問い合わせ:
フィリップスお客様情報センター
0570(07)6666
06(6261)8230

部品に関するお問い合わせ:
小泉成器部品センター
0570(09)2222

修理に関するお問い合わせ:
小泉成器修理センター
0570(09)8888

受付時間: 平日9:00～17:30（土・日・祝日・夏季休暇・年末年始を除く）

ホームページアドレス http://www.philips.co.jp/

無料修理規定

〈無料修理規定〉

1.取扱説明書、本体貼付ラベル等の注意書に従った正常な使用状態で保証期間内に故障した場合には、無料修理します。

2.保証期間内に故障して無料修理をお受けになる場合には、商品と保証書をご持参、ご提示のうえ、お買い上げの販売店にご依頼ください。
なお、商品を直接メーカーへ送付した場合の送料等はお客様の負担となります。

3.ご贈答、ご転居でお買い上げの販売店に修理を依頼できない場合は、小泉成器修理センターにご依頼ください。

4.保証期間内でも次の場合には有料修理になります。
①使用上の誤り及び不当な修理や改造による故障及び損傷。
②お買い上げ後の輸送、移動、落下等による故障及び損傷。
③火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障及び損傷。
④一般家庭以外（例えば、業務用の長時間使用）に使用された場合の故障及び損傷。
⑤保証書の提示がない場合。
⑥保証書にお買い上げ年月日、お客様名、販売店名の記入のない場合、或は字句を書き換えられた場合。

＊保証書は、本書に明示した条件のもとにおいて無料修理をお約束するものです。
従って保証書を発行している者（保証責任者）、及びそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。
保証期間経過後の修理についてご不明の場合は、お買い上げの販売店または小泉成器修理センターにお問い合わせください。

＊保証期間経過後の修理・補修用性能部品の保有期間について詳しくは取扱説明書の保証とアフターサービスの項目をご覧ください。

フィリップス マルチグルーミング キット保証書 持込修理

CERTIFICATE OF PURCHASE

この保証書は、「無料修理規定」記載内容で無料修理を行うことをお約束するものです。
お買い上げの日から下記期間中に故障が発生した場合は、本書をご提示のうえ、
お買い上げの販売店に修理をご依頼ください。

品　　名	マルチグルーミング キット
品　　番	QG3190
保 証 期 間	お買い上げ日より2年
対 象 部 分	本体（アタッチメントを除く）、充電アダプタ
お買い上げ日	年　　月　　日
お 客 様	ご住所　〒
	ご芳名
	電話番号
★ 販 売 店	販売店・住所・電話番号

★ 保証書は再発行しませんので、大切に保管してください。

★ ご販売店様へ

この保証書はお客様へのアフターサービスの実施と責任を明確にするものです。
贈答品、記念品の場合も含めて必ず記入捺印してお客様にお渡しください。

コンシューマー
ライフスタイル事業部

日本販売総代理店
小泉成器株式会社
〒541-0051
大阪市中央区備後町3-3-7

お客様情報センター（全国共通）
ナビダイヤル 0570-07-6666

この印刷物は再生紙を使用しております。　100% recycled paper

4203.000.6107.2